



Bentley Wireless CarPlay Installation Diagram

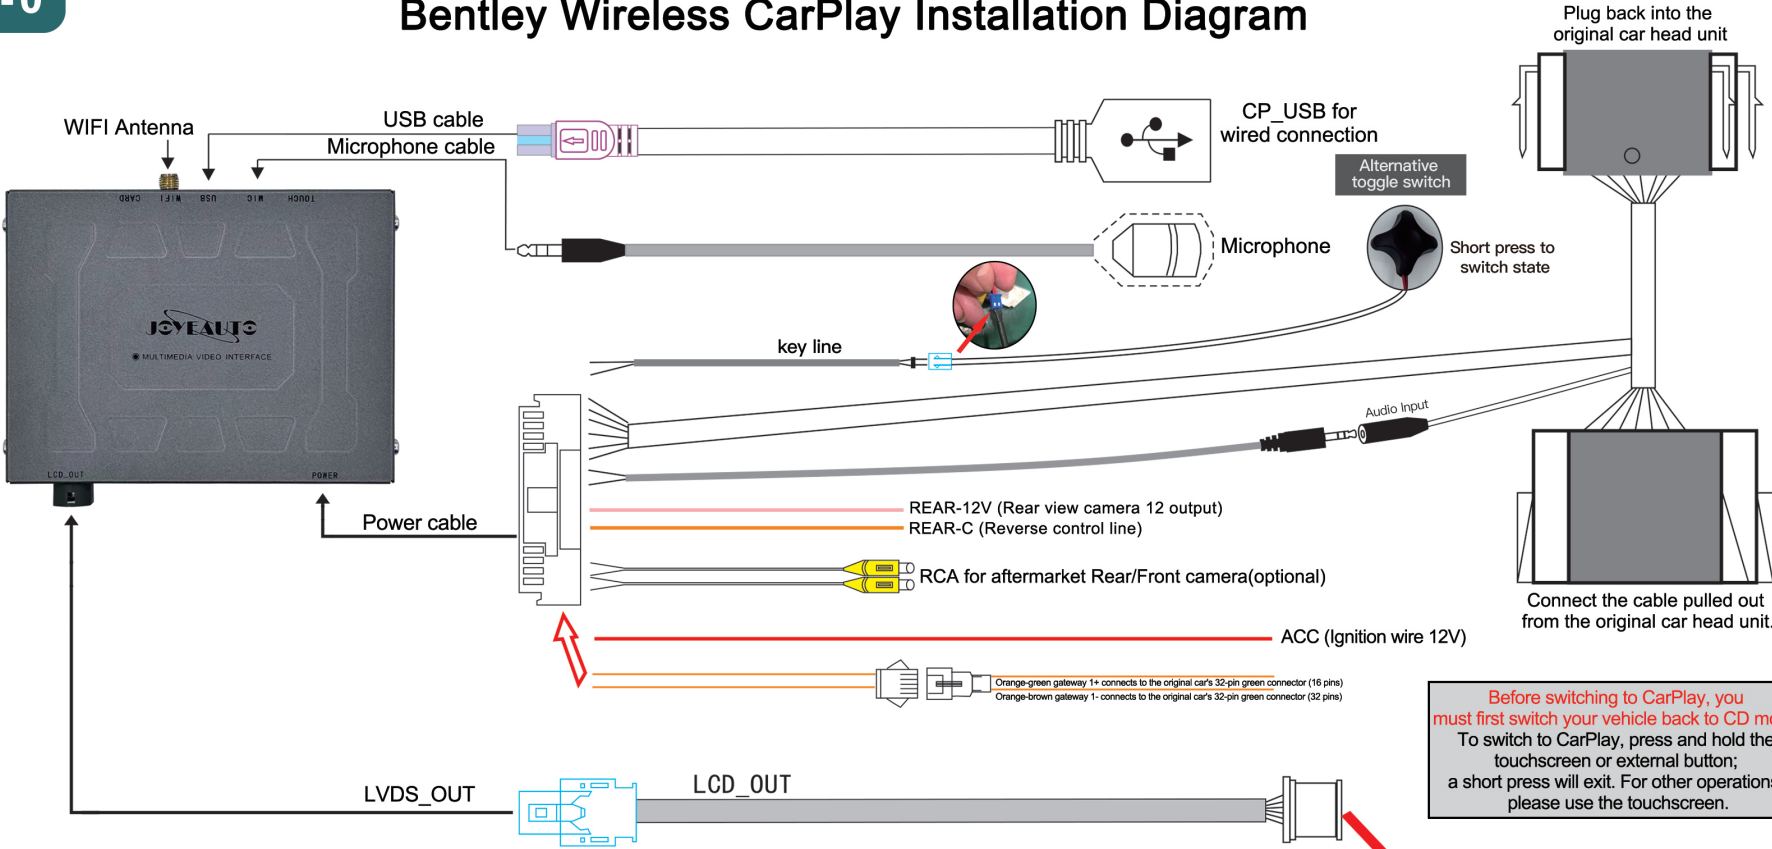


Before switching to CarPlay, you must first switch your vehicle back to CD mode. To switch to CarPlay, press and hold the touchscreen or external button; a short press will exit. For other operations, please use the touchscreen.

Dip Switch



(The reset button must be pressed/power off after toggling the DIP switch for it to be effective)

DIP switch 1	OFF / ON	Invalid / For Old Bentley Only
DIP switch 2	OFF / ON	Invalid / Touch Calibration
DIP switch 3	OFF / ON	Invalid / Invalid
DIP switch 4	OFF / ON	Invalid / Invalid
DIP switch 5	OFF / ON	Invalid / Invalid
DIP switch 6	OFF / ON	Invalid / Invalid
DIP switch 7	OFF / ON	Invalid / Invalid
DIP switch 8	OFF / ON	Invalid / Invalid

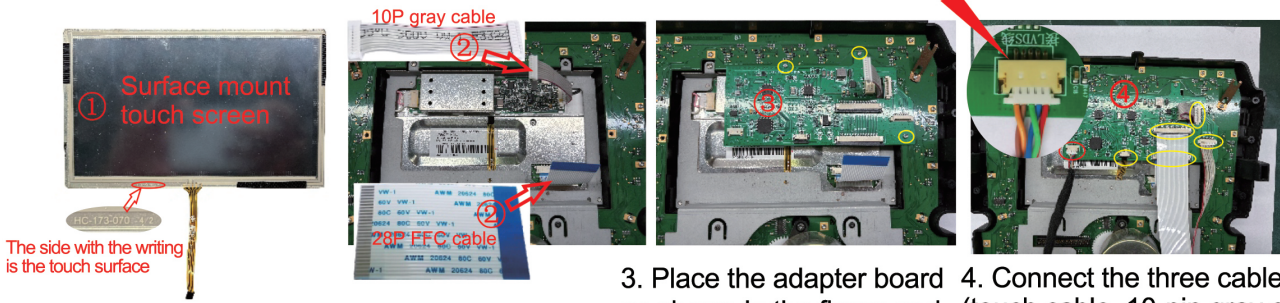

1. Install the 7-inch flexible screen, ensuring both sides are aligned with the display window. Secure the edges with tape.
2. Connect the two ribbon cables of the accessory as shown in the diagram.
3. Place the adapter board as shown in the figure and secure it with the three screws removed from its original position.
4. Connect the three cables (touch cable, 10-pin gray cable, and 28-pin 1.0mm FFC cable) to the corresponding ports on the adapter board.
5. Reconnect the two cables to the host unit.


How to Connect Wireless Apple CarPlay

1, Long press switch button (different car with different switch button, check from installation diagram) to enter AutoSmartLink system main menu as below:



2, Then turn ON Wi-Fi from iPhone's settings, you will find option of "WIFI-AP-****", but DO NOT connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click "AutoSmartLink", then according below steps get wireless connection (Note: if "AutoSmartLink" shows connected, but didn't go to CarPlay, then click Setup -> Paired device -> WiFi CarPlay then iPhone will show Use CarPlay request)

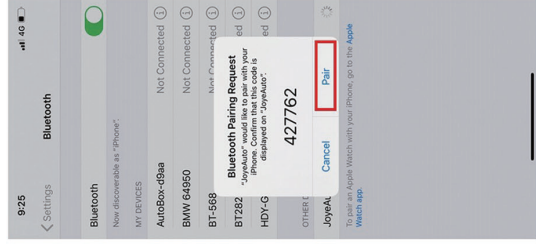

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

