

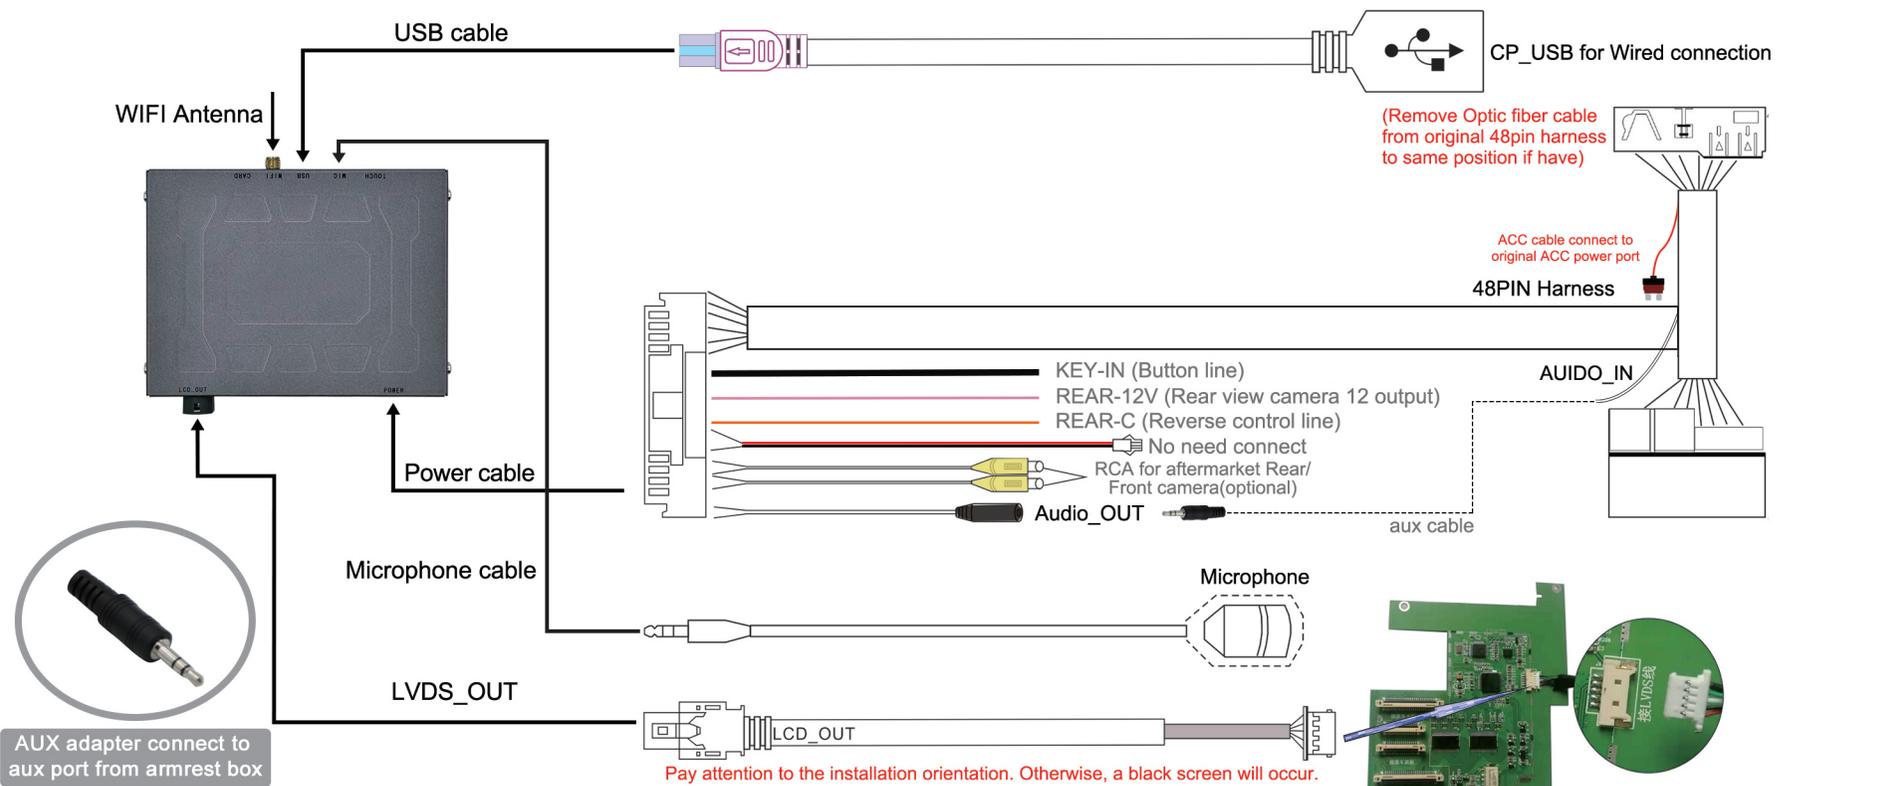


Porsche PCM3.0 Wireless CarPlay Installation Diagram

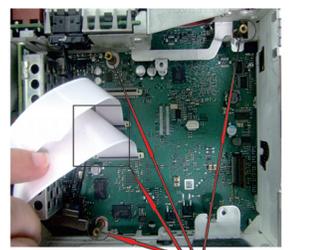

Dip Switch	Status	Description
2	ON	Touch correction
	OFF	OFF after correction
3	ON	For PCM3.0
	OFF	No function
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear Camera
	OFF	Aftermarket Rear Camera
1, 5, 6, 7 all set OFF.		

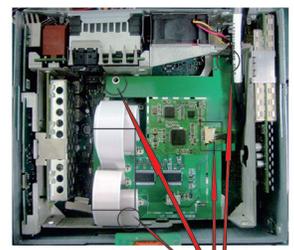




How to Connect Wireless Apple CarPlay

1, Long press switch button(different car with different switch button,check from installation diagram) to enter AutoSmartLink system main menu as below:



2, Then turn ON Wi-Fi from iPhone's settings,you will find option of " WiFi-AP_***** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click " AutoSmartLink ", then according below steps get wireless connection (Note: if " AutoSmartLink "shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iPhone will show Use CarPlay request)

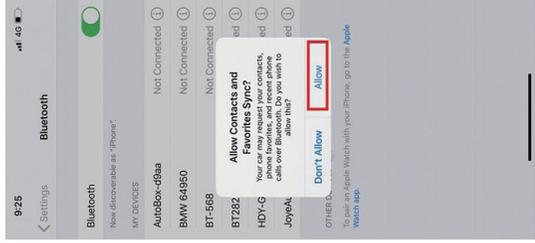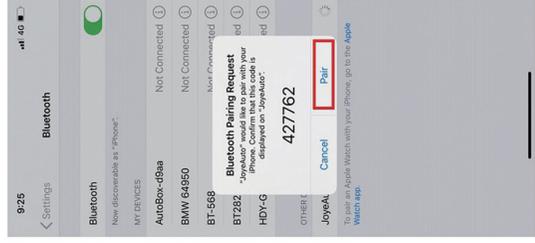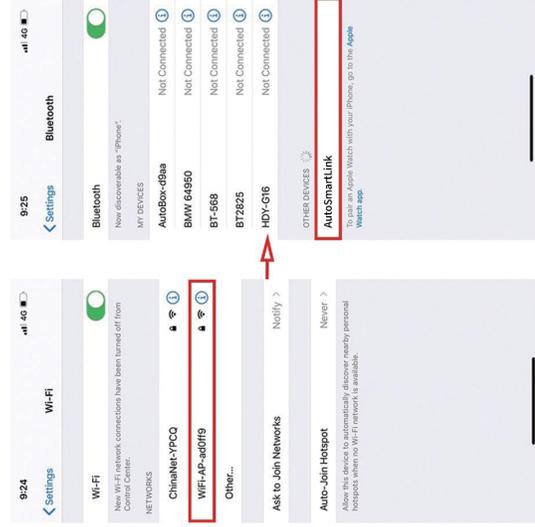

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

