


Porsche CDR3.1 Wireless CarPlay Installation Diagram

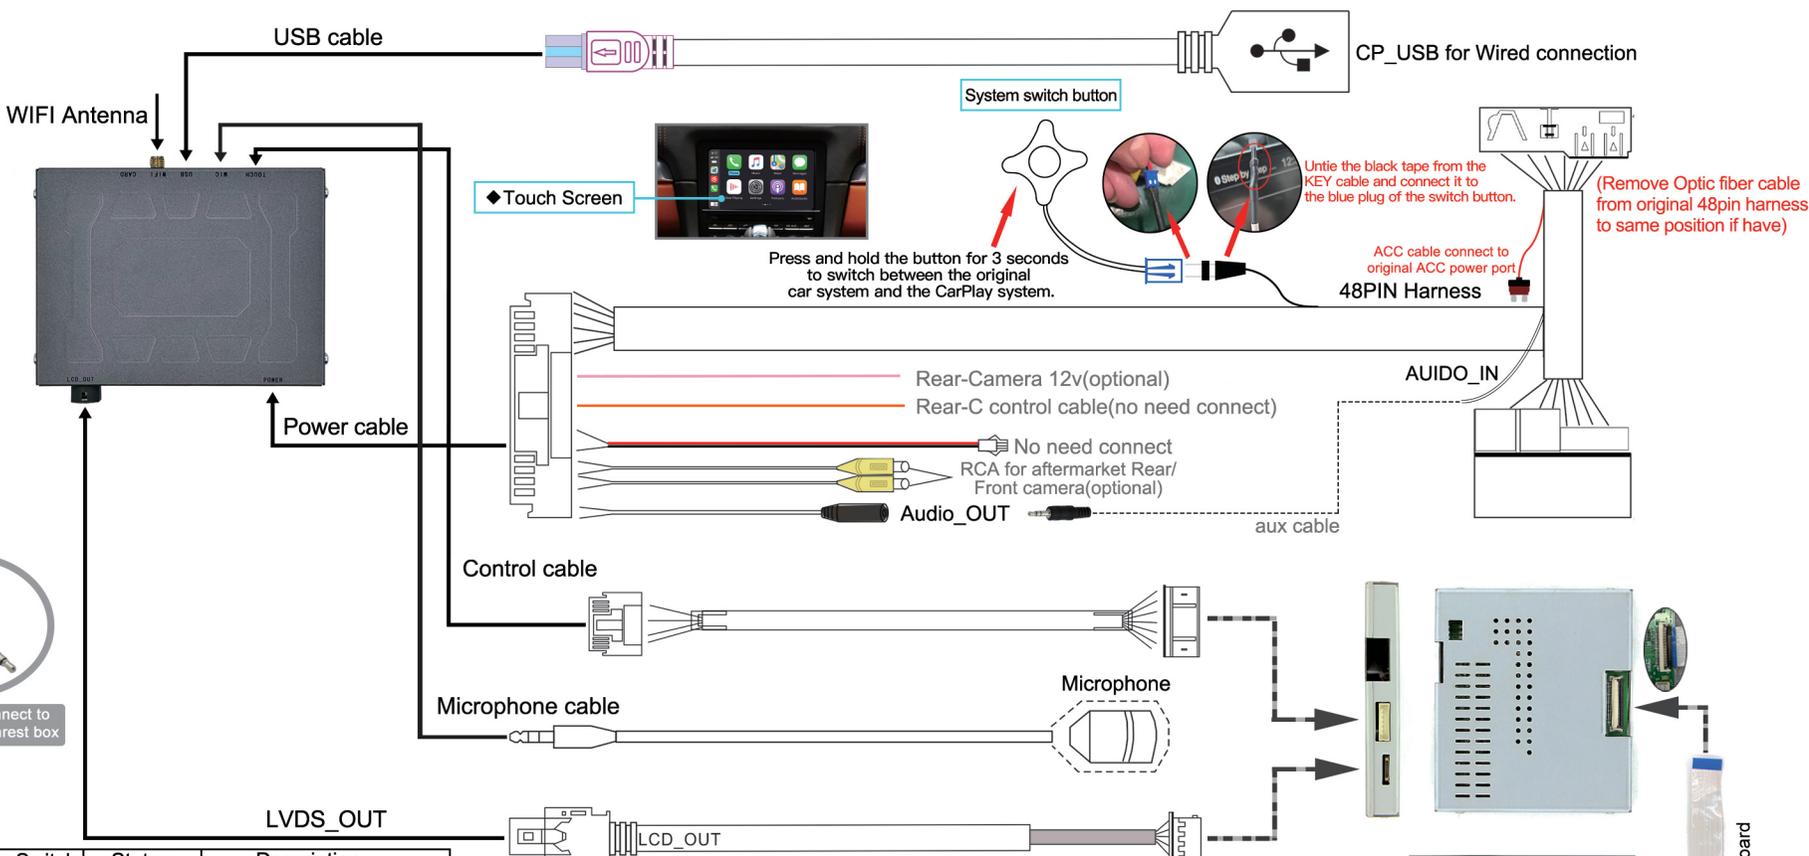


Dip Switch	Status	Description
1	ON	For CDR 31
	OFF	No Function
2	ON	Touch Screen calibration
	OFF	Off After Calibration
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear Camera
	OFF	Aftermarket Rear Camera

1,3, 5,6, 7 all set OFF.




Pay attention to the installation orientation. Otherwise, a black screen will occur.

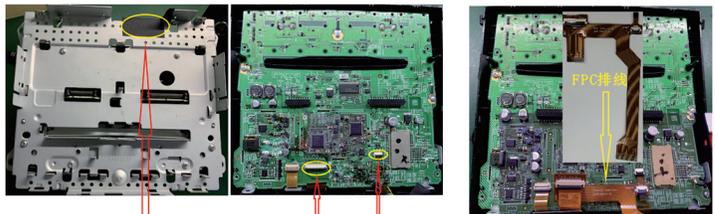

1. Separate the main unit from the panel and remove factory FPC as indicated.

2. Insert the FPC board we provide in the specified areas. Reinsert factory FPC boards into original slots. Make sure connections are flat to avoid shorting circuit.

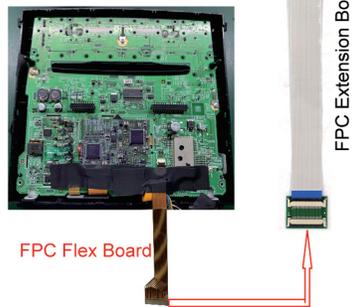

3. Place an electrical tape to secure the connections, then insert FPC extension board.




How to Connect Wireless Apple CarPlay

1, Long press switch button(different car with different switch button,check from installation diagram) to enter AutoSmartLink system main menu as below:



2, Then turn ON Wi-Fi from iPhone's settings,you will find option of " WiFi-AP_***** ",but DO NO need connect it, and DON'T connect any other network.

Turn ON Bluetooth, find and click " AutoSmartLink ", then according below steps get wireless connection (Note: if " AutoSmartLink "shows connected,but didn't go to carplay,then click Setup ->Bluetooth -> Paired device -> WiFi CarPlay then iPhone will show Use CarPlay request)

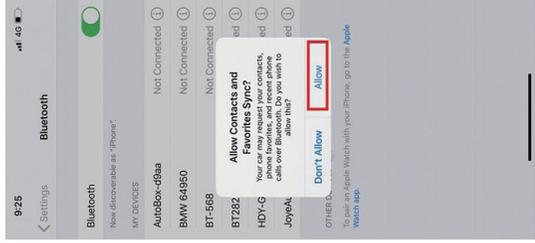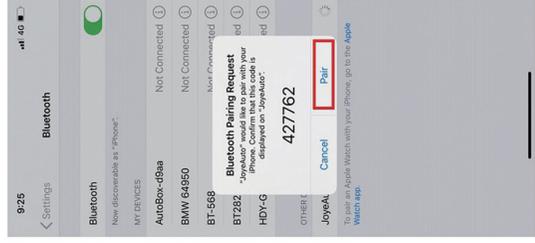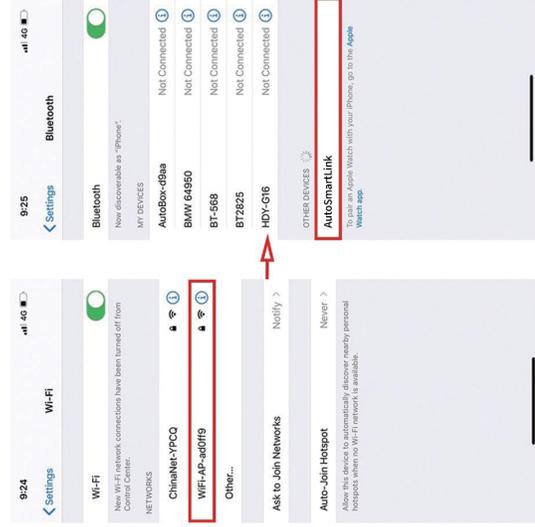

3, After 5 sec, it will enter CarPlay screen automatically, then enjoying...

